



Diffuse mode sensor OBD8000-R300-2PP-V1-L



- Extremely long detection range paves the way for new applications
- Pulse Ranging Technology (PRT)
- Visible light source for easy alignment
- Minimal black-white difference
- Switch point adjustment with quick twist
- Absolutely reliable background suppression


Diffuse mode sensor



Function

The sensors in the R300 series represent a versatile product line and adopt various functional principles. All sensors operate using proven Pulse Ranging Technology (PRT) and are characterized by high sensing ranges and detection ranges. Contained within the compact housing of the 28 series of light barriers, the R300 offers all of the properties of PRT such as maximum reliability when detecting objects and immunity against ambient light and cross-talk. To achieve this, the sensors in the R300 series make use of a number of different kinds of measurement data. What's more, the sensors are equipped with red light that is safe for the human eye as standard, making it easier to align the devices, even across expansive work areas. These features, combined with an innovative and intuitive operating concept, provide solutions for conventional automation tasks delivering the highest level of performance.

Dimensions

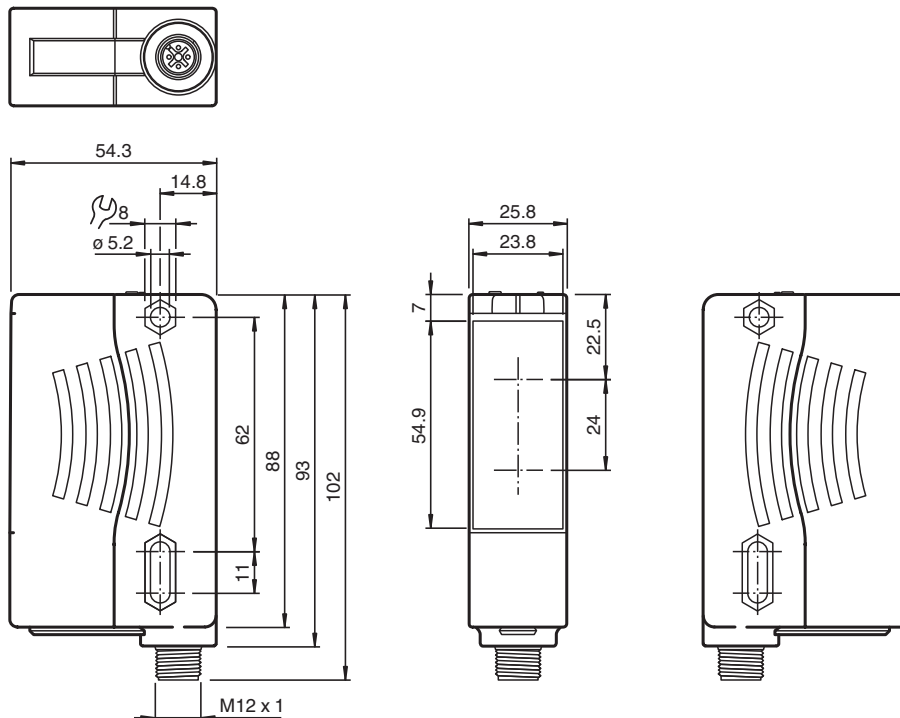

Technical Data

General specifications

Detection range	0.03 ... 8 m
Adjustment range	0.05 ... 8 m

Release date: 2023-04-04 Date of issue: 2023-04-04 Filename: 254264_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Technical Data

Reference target	Kodak white (90%)	
Light type		modulated visible red light
Laser nominal ratings		
Note		LASER LIGHT , DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS
Laser class		1M
Wave length		660 nm
Beam divergence		< 25 mrad
Pulse length		4 ns
Repetition rate		250 kHz
max. pulse energy		< 2.4 nJ
Black-white difference (6 %/90 %)		< 0.5 %
Angle deviation		max. $\pm 2^\circ$
Measuring method		Pulse Ranging Technology (PRT)
Diameter of the light spot		vertical 60 mm , horizontal 30 mm at a distance of 2 m
Ambient light limit		50000 Lux
Functional safety related parameters		
MTTF _d		100 a
Mission Time (T _M)		10 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator		LED green
Function indicator		2 LEDs yellow for switching state
Control elements		Sensing range adjuster
Electrical specifications		
Operating voltage	U _B	10 ... 30 V DC
Ripple		10 % within the supply tolerance
No-load supply current	I ₀	≤ 80 mA / 24 V DC
Time delay before availability	t _v	< 0.7 s , for temperatures < -30°C compliance of the specification 5 mins after power on
Output		
Switching type		Q - Pin4: NPN normally open / light-on, PNP normally closed / dark-on /Q - Pin2: NPN normally closed / dark-on, PNP normally open / light-on
Signal output		2 push-pull (4 in 1) outputs, short-circuit protected, reverse polarity protected
Switching voltage		max. 30 V DC
Switching current		max. 100 mA
Switching frequency	f	50 Hz
Response time		5 ms
Conformity		
Product standard		EN 60947-5-2
Laser safety		EN 60825-1:2014
Approvals and certificates		
UL approval		E87056 , cULus Listed , class 2 power supply , type rating 1
FDA approval		IEC 60825-1:2014 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007
Ambient conditions		
Ambient temperature		-40 ... 55 °C (-40 ... 131 °F)
Storage temperature		-40 ... 70 °C (-40 ... 158 °F)
Mechanical specifications		
Housing width		25.8 mm
Housing height		88 mm
Housing depth		54.3 mm
Degree of protection		IP67
Connection		4-pin, M12 x 1 connector
Material		
Housing		Plastic ABS

Release date: 2023-04-04 Date of issue: 2023-04-04 Filename: 254264_eng.pdf


Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.comUSA: +1 330 486 0001
fa-info@us.pepperl-fuchs.comGermany: +49 621 776 1111
fa-info@de.pepperl-fuchs.comSingapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com
 **PEPPERL+FUCHS**


Technical Data

Optical face	PMMA
Mass	90 g

Connection

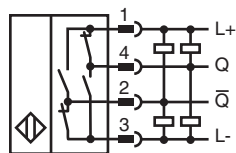



Connection Assignment

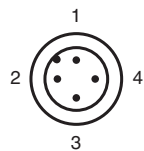

Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)


Assembly

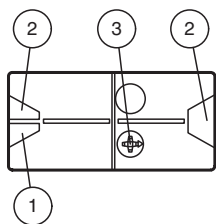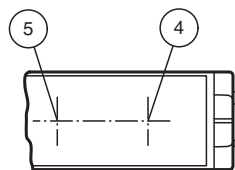


1	Operating indicator	green
2	Signal indicator	yellow
3	Sensing range adjuster	
4	Emitter	
5	Receiver	

Release date: 2023-04-04 Date of issue: 2023-04-04 Filename: 254264_eng.pdf

Characteristic Curve

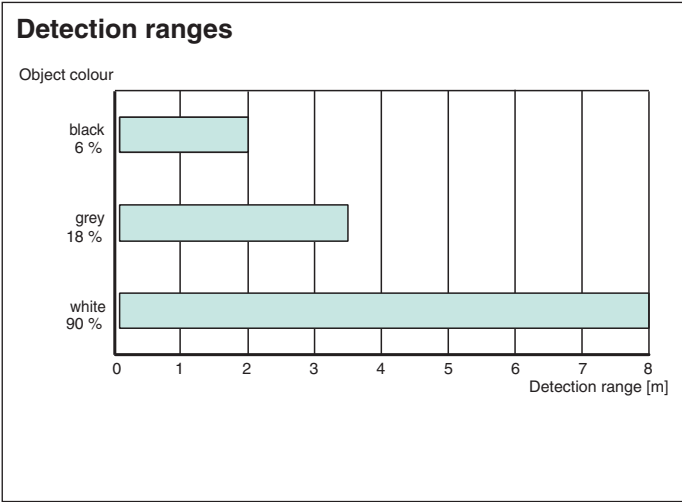

Safety Information

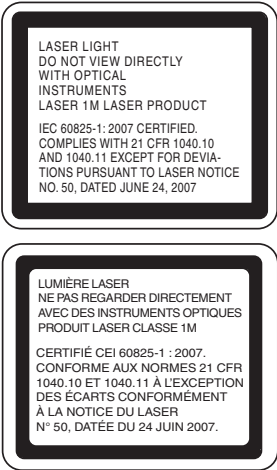

Safety Information

Laser Class 1M Information
The irradiation can lead to irritation especially in a dark environment. Do not point at people!
Caution: laser light, do not observe laser light with optical instruments such as magnifying glasses, microscopes, telescopes or binoculars.
Maintenance and repairs should only be carried out by authorized service personnel!
Caution – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Accessories

	OMH-05	Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm
	OMH-21	Mounting bracket: mounting aid for sensors in the RL* series
	OMH-22	Mounting aid for RL* series
	OMH-RLK29-HW	Mounting bracket for rear wall mounting
	OMH-K01	dove tail mounting clamp

Accessories

	OMH-K03	dove tail mounting clamp
	OMH-VDM28-01	Metal enclosure for inserting protective panes or apertures
	OMH-VDM28-02	Mounting and fine adjustment device for sensors from the 28 series
	OMH-07-01	Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

Release date: 2023-04-04 Date of issue: 2023-04-04 Filename: 254264_eng.pdf

Intended Use

Mounting instructions:

The sensor can be mounted directly by means of thru-holes or by using a fixing bracket or mounting clamp (not included in the scope of delivery).

Ensure that the surface is level in order to prevent the housing from becoming distorted when the fittings are tightened. It is advisable to secure the nuts and screws using spring disks to prevent the sensor from being misaligned.

Connection:

Connect the device as set out in the connection diagram.

Adjustment:

The green LED lights up when the operating voltage is applied.

Adjust the sensor so that the laser point is on the center of the target.

Installation Note

A pressure equalization membrane is fitted on the sensor nameplate.

When mounting, make sure that the pressure equalization membrane is not sealed off.

Operating Concept

Activating the operating function:

Activate the operating function by turning the sensing range adjuster by more than 180°.

If no operation takes place within five minutes, the operating function will be deactivated.

Sensing range adjustment:

To increase the sensing range, turn the sensing range adjuster in a clockwise direction.

To reduce the sensing range, turn the sensing range adjuster in a counterclockwise direction.

To jump directly to the switch point, use the Quick Twist function. This function can be activated by quickly turning the sensing range adjuster. If Quick Twist was successful, the yellow LED will change status.

To make subsequent fine adjustments to the sensing range, turn the sensing range adjuster slowly.

As soon as the scanning range limit has been reached, the green and yellow LEDs will quickly flash alternately (approx. 8 Hz).